

What to do if...

What to do if...



A tire punctures

P. 455/
456

If you have a flat tire



The hybrid system does not start

P. 62

Hybrid vehicle immobilizer system

P. 466

If the hybrid system will not start

P. 471

If the 12 volt battery is discharged



The shift lever cannot be moved out

P. 467

If the shift lever cannot be shifted from "P"



The engine coolant temperature gauge enters the red zone

P. 475

If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 468

If you lose your keys



The battery runs out

P. 471

If the 12 volt battery is discharged



The doors cannot be locked

P. 26

Doors



The horn begins to sound

P. 64

Alarm



The vehicle is stuck in mud or sand


















P. 478

If the vehicle becomes stuck

| | |
|---|---|
|  The warning light or indicator light comes on | P. 430 If the warning light turns on |
|---|---|



nWarning lights

| | |
|--|---|
|  Brake system warning light or  P. 430 |  Malfunction indicator lamp or  P. 431 |
|  ABS warning light or  P. 432 |  Driver's seat belt reminder light P. 433  Front passenger's seat belt reminder light P. 433 |
|  ECB*/VSC warning light P. 432 |  Tire pressure warning light P. 433 |
|  Low fuel level warning light P. 432 |  Electric power steering warning light P. 432 |
|  SRS warning light P. 431 |  Pre-collision system warning light P. 432 |
|  Open door warning light P. 432 |  Master warning light P. 433 |
|  Charging system warning light P. 431 | *: Electronically Controlled Brake System |

| | |
|--|---|
|  The warning message is displayed | P. 436 If the warning message is displayed |
|--|---|